

### PACKAGE INCLUDES

- Four combs - (0mm, 2mm,4mm,6mm)
- 1 small oil bottle
- 1 cleaning brush
- 1 copy of instructions
- USBC Charging cable
- Allen key for blade removal



### INSTRUCTION MANUAL FOR ROBIN TRIMMER

*Original Instructions*

#### IMPORTANT SAFETY INSTRUCTIONS

**Read all instructions before using this appliance**

**Please Note: A copy of these instructions can be downloaded by visiting our website at [www.liveryman.co.uk](http://www.liveryman.co.uk)**

**This appliance is designed to be used in commercial areas.**

**DANGER:** To reduce the risk of electric shock: Do not reach for an appliance that has fallen into water. Unplug immediately from receptacle. Unplug this appliance before cleaning.

**WARNING:** To reduce the risks of burns, fire, electric shock, or injury to persons: Close supervision is required when this appliance is used by, on, or near children, or persons with limited physical, sensory, or mental capabilities or invalids. Use this appliance only for its intended use as describe in this manual. Do not use attachments not specified by the manufacturer. Never operate this appliance when it has a damaged cord or plug, when it is not working properly, after it has been dropped or damaged, or after it has been dropped into water. Return the appliance to a service centre for examination and repair.

**WARNING:** This appliance is intended for animal clipping and trimming purposes only. Use only on clean dry hair.

**WARNING:** During use, do not place or leave the appliance where it is expected to be: subject to damage by an animal, or exposed to weather.

**WARNING:** Cutting blades may become hot after prolonged use.

**WARNING:** For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance. Charging must be carried out indoors and in a dry place.

- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Animal trimmers can be used by children aged from 3 years under supervision.
- Animal trimmers can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

- Keep the cord away from heated surfaces. Do not pull, twist or wrap the cord.
- Do not use operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to off position (e.g. "0") then remove plug from outlet.
- This trimmer uses a chargeable lithium-ion battery. It must be disposed of in accordance with the local regulations, instead of together with other household refuse.

#### SAVE THESE INSTRUCTIONS

**To ensure you achieve the best possible results from your trimmer, please read the following instructions carefully before use.**

#### SPECIFICATION

Charging time:	3 hours
Operation time:	45 mins
Blade width:	36mm
Blade height:	0.5mm
Weight:	148 grams

- Use only with accessories included in the package or recommended by the manufacturer.

- Except when charging, always unplug from the electrical socket after use.
- Keep away from water.
- The USB lead must be kept dry at all times.

#### OPERATING INSTRUCTIONS

##### CHARGING

1. Switch off trimmer.
2. Connect the USB lead to the trimmer.
3. Connect the USB to a USB power source - *Please note; Use only with a USB Power Source on a certified product, such as on a computer, receptacle, lamp, class 2 power supply or automotive - Appliance charging voltage can not exceed 5V.*
4. Check the charging indicator. When the indicator light on the trimmer is lit the unit is charging.
5. When the trimmer is fully charged, simply switch off and unplug the adapter unit.
6. The charging time should not exceed 24 hours or the life of the battery may be shortened.
7. Recharge: 3 hours (approximately 45 minutes use - depending on thickness of coat).
8. It is normal for the internal parts to become warm when charging.

##### CAUTION:

\*\*\*\* Charge in room temperature range 5°C and 40°C

\*\*\*\* Always switch off and unplug the power source after use

 
#### OPERATIONAL HINTS

- The Liveryman Robin can be used to clip with or against the direction of the coat.
- For a closer clip use against the hair.
- For the best finish, guide the trimmer through the coat. Do not force the trimmer as this will cause an uneven cut, and the blades may jam.


#### OPERATION

1. The blade must be lubricated before and after each use, as this will maintain it in good condition and will extend its service life
2. Always make sure the animal has clean and dry hair before trimming
3. Should the blades overheat, switch the unit off for a few minutes to let it cool down and lubricate the blades
4. Use the spacing combs for hair length variation. 0mm, 2mm, 4mm & 6mm combs provided.
5. Avoid impact of the blade with hard objects, as this may cause damage to the blade teeth
6. Do not force the trimmer through coat, this will cause an uneven cut and the blades may jam. For the best finish, guide the trimmer through the coat.


**To install comb:** Select comb, align with the edge of the cutter head then firmly and gently push it into place.

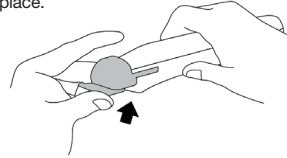

 When removing, grip comb on either side of clipper head and pull gentle to remove it.

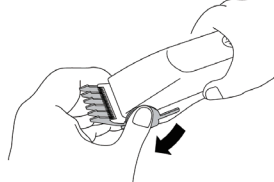

 Choose your preferred cutting height of comb. Allow the trimmer to glide through the hair to leave either 0.5mm, 2mm, 4mm or 6mm length of hair.

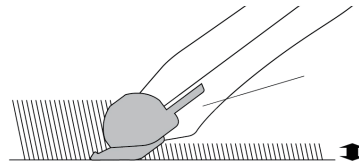



## INSTRUCTIONS FOR USE

PROFESSIONAL HORSE TRIMMER

LIVERYMAN

L I V E R Y M A N . C O . U K

### WARRANTY REGISTRATION

Please visit our website to register your warranty.

[www.liveryman.co.uk](http://www.liveryman.co.uk)

You will require the products serial number which can be located on the underside of the trimmer and proof of purchase.

*Whilst every care has been taken in the compiling of information within our instructions, Liveryman (Agrihealth Ltd) accepts no responsibility for any errors or omissions in technical data or other information as stated.*

Model No: 168624



Liveryman is part of the Agrihealth Group.  
For more information visit [www.agrihealth.ie](http://www.agrihealth.ie)

The trimmers are manufactured to comply with the relevant European Directives and Standards.

2004/108/EC	EMC
2011/65/EU	ROHS
Tested to:	EN60335-1 EN60335-2-8



### ENVIRONMENTAL DISPOSAL

It is the owner's responsibility to dispose of the trimmers in a reasonable manner after their useful life. Do not dispose of in household waste.

The trimmer can be returned to the place of purchase or Liveryman (Agrihealth Ltd) for recycling, or taken to your local authority waste disposal site.

### The service life of the motor may be shortened in the following situations:

1. The trimmer is stored in humid surroundings for long periods.
2. The blade has not been lubricated properly.
3. Stored hair in the blade housing has not been cleaned properly.
4. An incorrect power source is used.

### BATTERY LIFE

The service life of the battery may be shortened in the following situations:

1. The battery is stored in humid surroundings for long periods.
  2. The battery is over-charged.
  3. The battery is over depleted (when the battery is out of power, the trimmer is kept in the switched-on position for long periods).
  4. The trimmer is always used plugged in.
  5. The trimmer has not been charged for more than 6 months.
- When not in regular use, it is recommended to recharge the battery at least every 3 months.
  - If cordless operation lasts for less than 10 minutes, despite proper recharging, the battery has exceeded its service life and should be replaced.

### CLEANING THE MAIN BODY AND ACCESSORIES

1. Switch off and unplug the trimmer before cleaning.
2. Wipe with a soft damped cloth.
3. Allow it to air-dry before use.

### COMB ATTACHMENTS

You may adjust the cutting length from 0.5mm - 6mm by attaching the comb attachment.

1. The cutting length is marked on the of comb attachments.
2. Select a suitable size and slide the blade into the comb attachment.

 
### BLADE LIFE

The service life of the blade may be shortened in the following situations:

1. The blade has not been lubricated properly over a long period.
2. The blade cuts objects other than hair or unclean hair.
3. A foreign object damages the blade edge.
4. The blade is subjected to an impact.


If the cutting efficiency is reduced substantially despite proper maintenance, the blade has exceeded its service life and should be replaced.

- Only wipe the equipment with a soft or slightly damp cloth. Never use solvent or scouring agent.
- The cutting set can be cleaned with a hygienic spray. Do not use any other cleaning agent.
- For optimal performance, it's important to oil the cutting set frequently (Fig. 2). Only use cutting set oil.
- If the cutting performance decreases after lengthy use despite regular cleaning and oiling, the cutting set should be replaced.
- Use the blade guard when the equipment is not in use

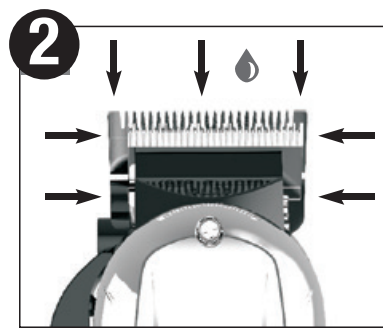

### CHANGING BLADES

 1. Turn trimmer off and disconnect cord from the trimmer.
2. Undo both screws
3. Reassemble, aligning blades as shown in Fig.1.
4. Blades must be adjusted so they are parallel and the first tooth on the left of the top blade covers the first tooth on the left of the top blade covers.
5. Tighten both screws.

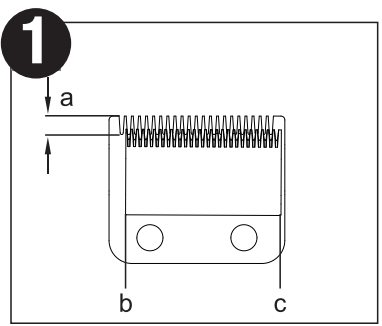

### CLEANING AND CARE

- Do not immerse the equipment in water.
- After each use, remove cut hairs from the cutting set using the cleaning brush.